


ResponseCard RF Programming Guide

1. Press and release the "GO" Button
2. While the light is flashing red and green, enter the two digit room channel
(refer to the Channel Guide below)
3. After the 2nd digit is entered, press the "GO" button again. The light should briefly remain solid green
4. Press the "1/A" button, the light should quickly flash yellow to confirm

If you do not get this result, repeat steps 1-4 as necessary

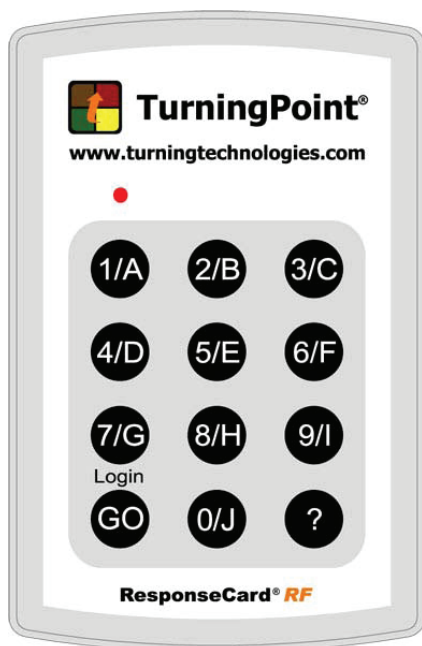

Channel Guide

Room	Channel	Room	Channel
116	16	133	33
117	17	138	38
118	18	207	07
119	19	213	13
127	27	217	21

For questions regarding the audience response system, clickers, programming or transmitting, please contact Lawhelp at lawhelp@u.washington.edu